

www.onpointvisuals.com
 boston:
 800/922-1892
 jacksonville:
 866/860-1892

1. Setup base

Rotate the feet to form equal thirds of a circle. If the feet should become separated, they are labelled top, middle, and bottom for easy reassembly.

2. Place bottom bracket

Extend the telescoping vertical poles slightly. Insert the widest pole (the bottom) through the bottom bracket and screw into the base assembly. Be sure the bracket's tube sleeves are facing up.

3. Attach top bracket and adjust height

Attach the top bracket to the thinnest, top pole by screwing in the provided thumbscrew. Adjust the bottom bracket to your requirements, and extend the telescoping vertical poles to slightly less than the banner height.

4. Insert horizontal poles and banners.

Slide the grooved horizontal poles into the sleeve hems of the banners. Then, slide the banner sleeves, with the poles inside, through the bracket tubes.

5. Adjust height and width

Loosen the lock nuts on the telescoping sections to adjust the height of the stand until it is pulling the banners fairly taut. Make sure the brackets are not twisted in relation to one another.

parts list:

- 4 - grooved horizontal poles
- 1 - vertical pole with three telescoping sections.
- 1 - base with 3 rotating feet
- 2 - brackets, top and bottom
- 1 - banner

tips:

Always keep these instructions with your outlook

To minimize creasing, carefully fold or roll banners after each use

When the display will be subjected to frequent travel, a hard carry case is recommended.

In case of loss or damage, spare parts are readily available.

